


Shipper: MaxPlus PharmaPack SP (SKU # 1RPPV48-2)

Products: Specialty Pharmacy Products (2-8°C)

Materials Needed: MaxPlus PharmaPack Shipper, PCM0 pouches (x2), PCM5 pouches (x2)

Summer Packaging Assembly Illustration:

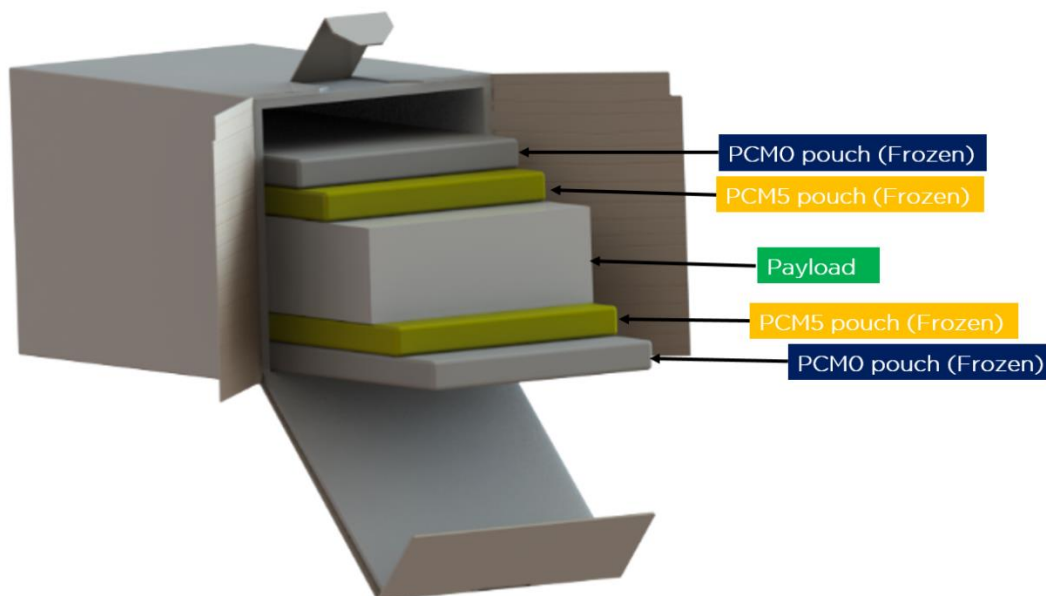

Summer Coolant Pre-conditioning:

- 2 x PCM0 pouches stored in the freezer (-10°C to -30°C) for a minimum of 24 hours
- 2 x PCM5 pouches stored in the freezer (-10°C to -30°C) for a minimum of 24 hours
- After 24 hours, the PCMs are ready for use.
- To pack the shipper, take out **PCM0 pouch (x2)** and **PCM5 pouches (x2)** from the freezer and **condition them laying flat** on a benchtop for 30 minutes at room temperature.

Note: Make sure that the PCM0 and PCM5 pouches are frozen solid before removing them from the freezer. Don't stack the pouches on top of each other on the benchtop.

Summer Pack-out Instructions:

Step 1: Insert one frozen PCM0 pouch (benchtop conditioned) into the PharmaPack.

Step 2: Insert one frozen PCM5 pouch (benchtop conditioned) on top of the PCM0 pouch


Step 3: Insert the payload on top of the frozen PCM5 pouch.

Step 4: Insert the second frozen PCM5 pouch (benchtop conditioned) on top of the payload.

Step 5: Place the last frozen PCM0 pouch (benchtop conditioned) on top of the PCM5 pouch.

Step 6: Close the tuck top lid and use packaging tape to seal the box.

Winter Packaging Assembly Illustration:

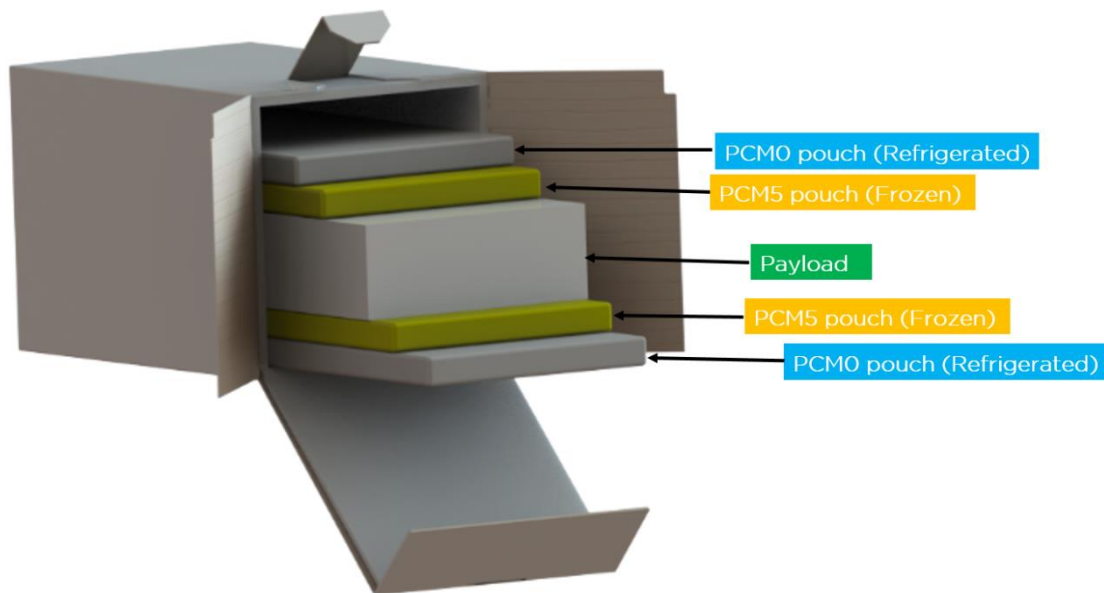

Winter Coolant Pre-conditioning:

- 2 x PCM0 pouches stored in the refrigerator (2°C to 8°C) for a minimum of 24 hours
- 2 x PCM5 pouches stored in the freezer (-10°C to -30°C) for a minimum of 24 hours
- After 24 hours, the PCMs are ready for use.
- To pack the shipper, take out **PCM5 pouches (x2)** from the freezer and **condition them laying flat** on a benchtop for 30 minutes at room temperature.

Note: Make sure that the PCM5 pouches are frozen solid before removing them from the freezer. Don't stack the pouches on top of each other on the benchtop.

Winter Pack-out Instructions:

Step 1: Insert one refrigerated PCM0 pouch directly from the refrigerator into the PharmaPack.

Step 2: Insert one frozen PCM5 pouch (benchtop conditioned) on top of the PCM0 pouch

Step 3: Insert the payload on top of the frozen PCM5 pouch.

Step 4: Insert the second frozen PCM5 pouch (benchtop conditioned) on top of the payload.

Step 5: Place the last refrigerated PCM0 pouch from the refrigerator on top of the PCM5 pouch.

Step 6: Close the tuck top lid and use packaging tape to seal the box.